Verify settings:

SP = 70 deg. F


dIF = 1

ASd = 0

OFS = not used

SF = 0

Unplug controller. Remove cover.

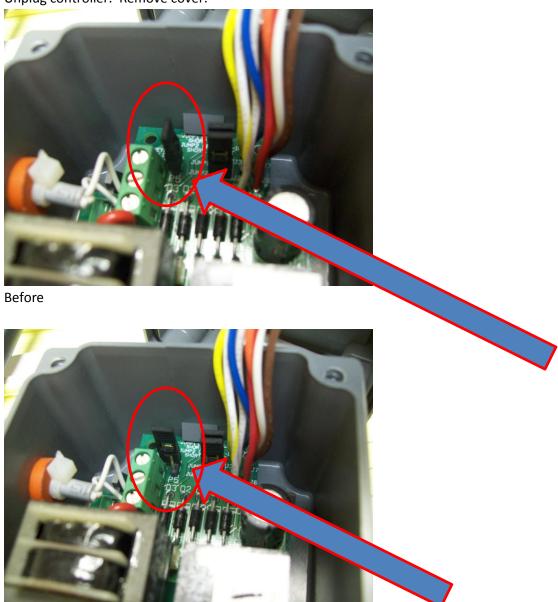

After, now it is locked.

Reinstall cover. TAKE CARE TO FIND THE EXISTING THREADS WITH THE SCREWS. Cutting new threads may result in a stripped hole.